



Maintenance guide for walls

Altro Whiterock and Altro Whiterock Chameleon

Initial cleaning

Once all panels and joints are installed, remove the protective film and clean all surfaces down with an antistatic solution, or anti-static wipes. This is required as the panel may have static build up, and any dust in the atmosphere will adhere to the surface of the panel.

Continue with regular maintenance as described to the right.

Regular maintenance

- Altro Whiterock can be cleaned with a diluted soap/detergent solution, such as PVC wall cleaner (for stubborn stains) or AltroClean 44 (degreaser).
- Use a lint-free, non-woven wipe or a polyester knit wipe. Both are extremely low in particle generation.
- When cleaning Altro Whiterock, we recommend the temperature of water does not exceed 140°F (60°C).
- Pressure cleaning with hot water may be used with the pressure nozzle, a minimum of 2 feet (600mm) away from the surface.
- To reduce the build-up of static, cleaning the panels with an anti-static solution or anti-static wipes is recommended.
- Some cleaning agents may adversely affect Altro Whiterock. See Altro's chemical resistance chart for reactions to common chemicals at www.altro.com/techdocs.

The following maintenance products are available to purchase




P/N: ASF 44 Cleaner
Altro Clean 44 - 5 Liters
1.3 Gallons



P/N: ALW A863
Altro Whiterock Anti-Static Wipes
80/Unit



P/N: ALW A859/325
Altro Whiterock PVC Cleaner

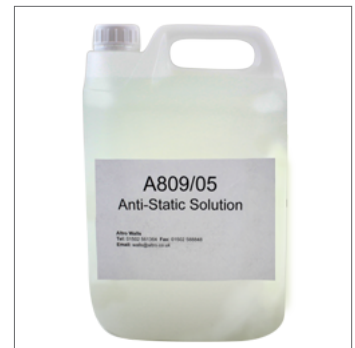

P/N: ALW A809/05
Whiterock Anti-Static Agent
5 Liters